



Jobs

ABS Scale for Windows Jobs area is where you get started by opening a new job or choosing an existing estimate. ABS Scale will help organize your estimates to insure you stay on top. Other features include utilities to backup, save, and restore jobs when needed. The copy feature is great for repeat work. Copying an existing job or a template job into the job you are starting will allow you to take advantage of repetitive work.

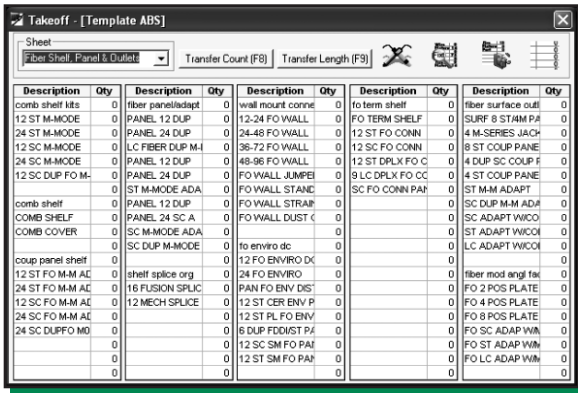


Takeoff

Takeoff saves you time by using item and assembly level takeoff. You can use the takeoff probes or manually enter lump sum quantities directly by keyboard or mouse. Your material list can be updated by most major pricing services. ABS Scale for Windows will become a valuable asset to your company's productivity and most important to the bottom line. Totals for material and labor are sent to Reports and the Bid Summary.

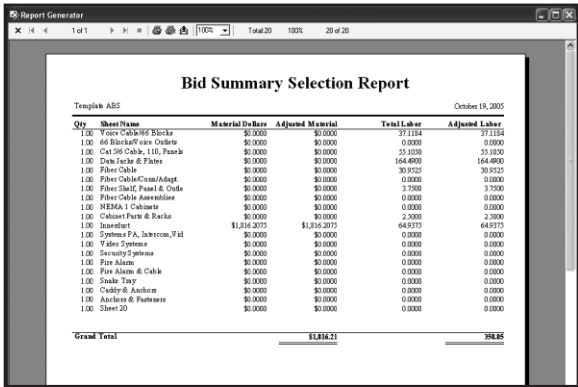

Reports

McCormick's report generator allows you to completely document and review your estimates. Reports come ready to use in ABS Scale for Windows. Each item and assembly will appear in your reports showing totals for quantity, price, extended price, labor, and extended labor. Reports are automatically generated from takeoff. Having complete documentation is crucial to appearing professional to your customer base. Remember, quality is remembered long after the price is forgotten.

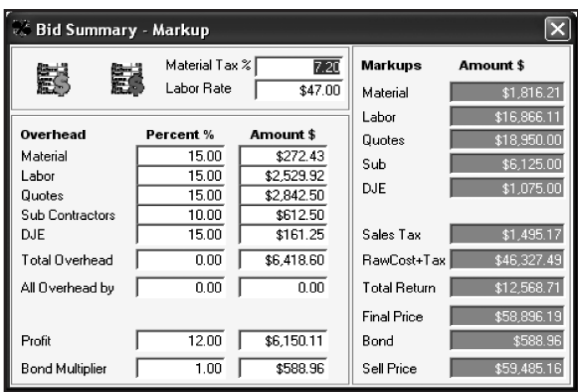

Bid Summary

Bid Summary is where you recap and prepare your bid to submit. Enter your quotations, sub contractors, other cost, and markups. The Markup screen (shown) is where you can evaluate your entire estimate on one screen to make the crucial value judgment decisions necessary to generate a competitive bid price.

1-800-444-4890

480/831-8914 480/820-2422 (fax)

149 West Boston • Chandler, Arizona 85225

www.mccormicksys.com

